

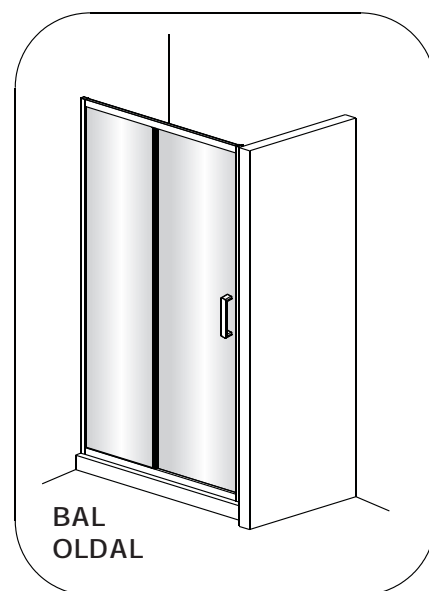
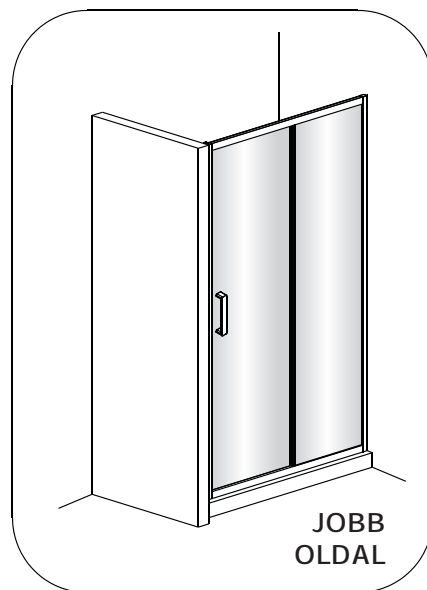



OLTENS



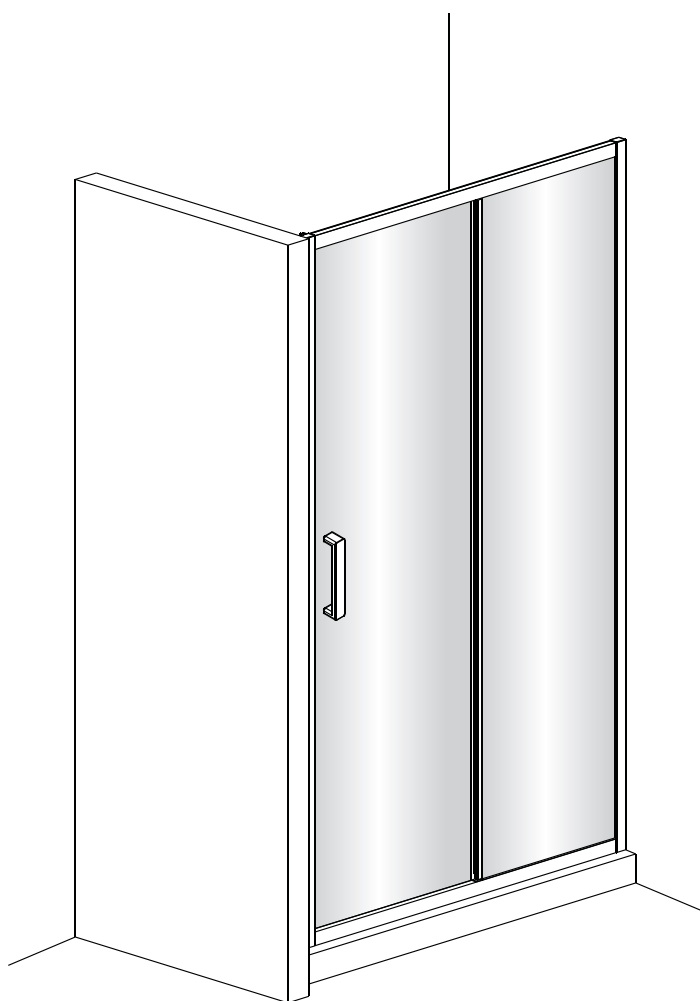


Fulla


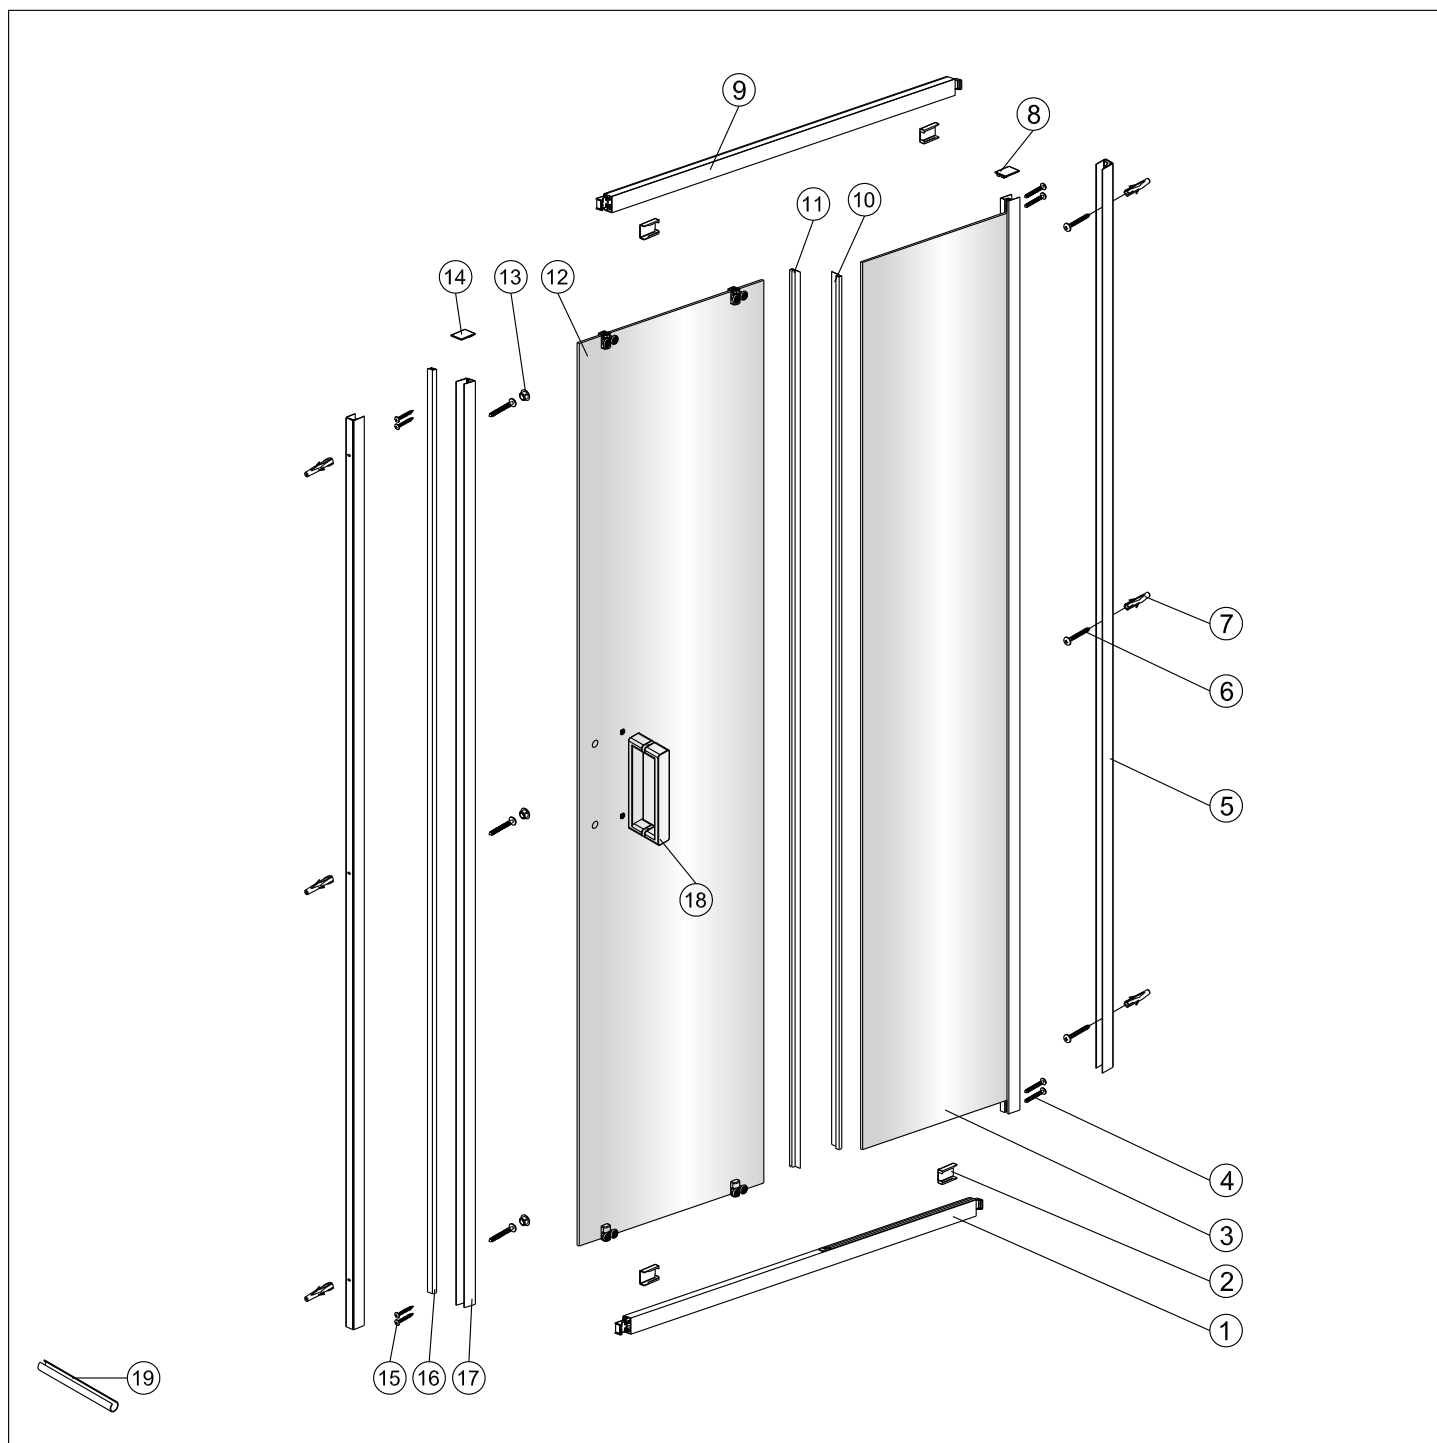


1 x1	2 x4	3 x1	4 x4 ST4X30	5 x2	6 x6 ST4X40	7 x6	8 x1	9 x1	10 x1
11 x1	12 x1	13 x3	14 x1	15 x4 ST4X20	16 x1	17 x1	18 x1	19 x1	


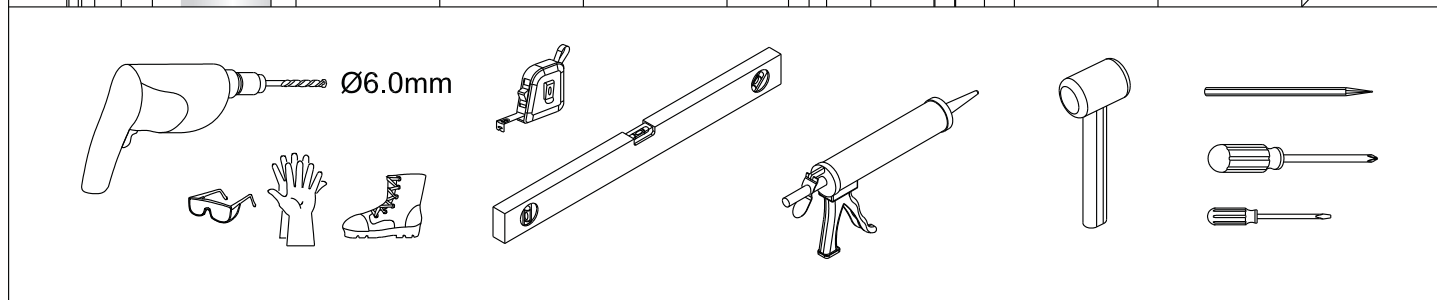


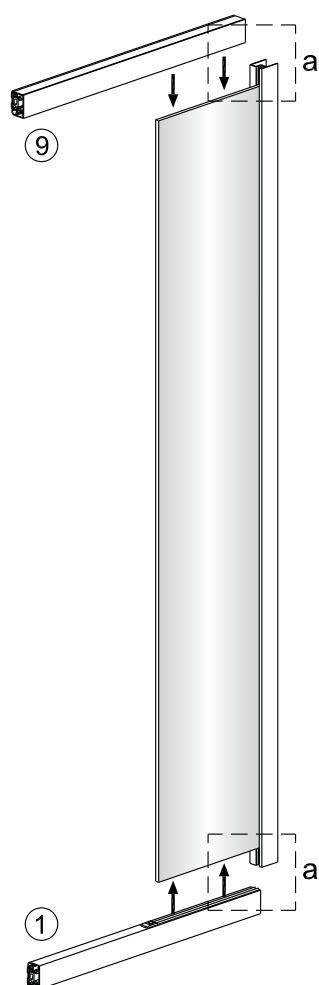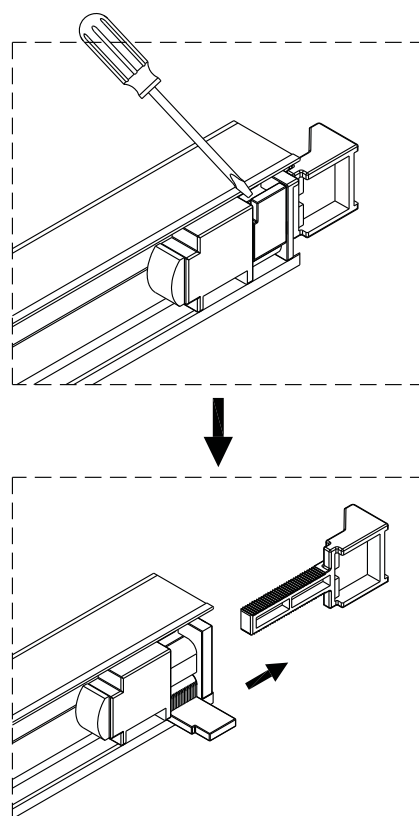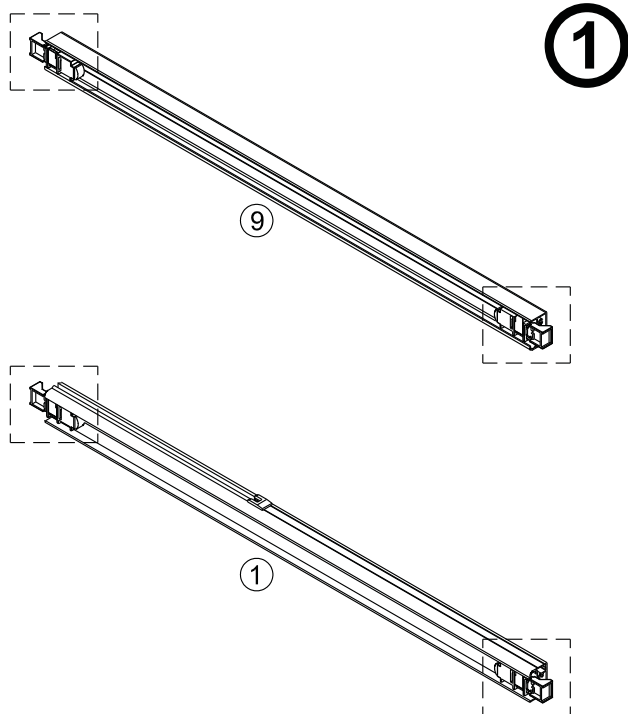




②

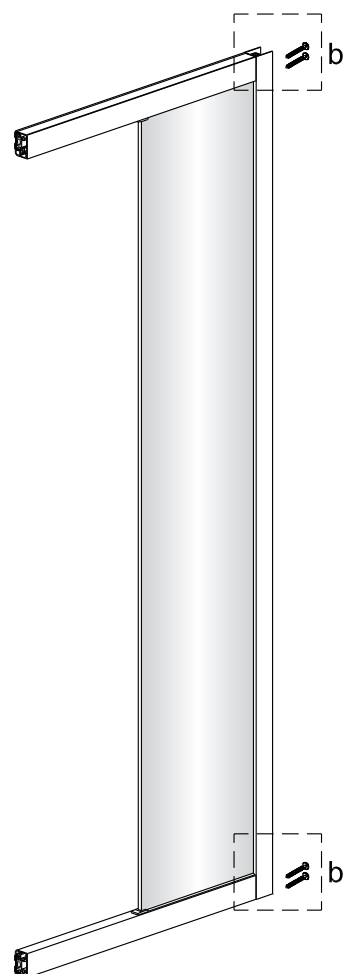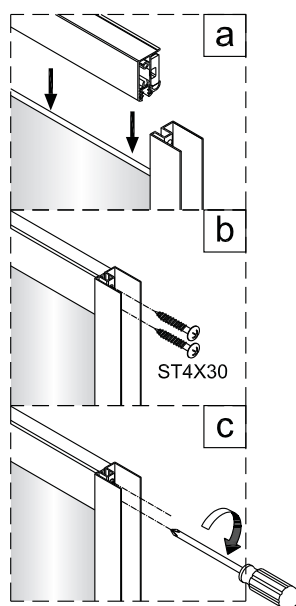


③



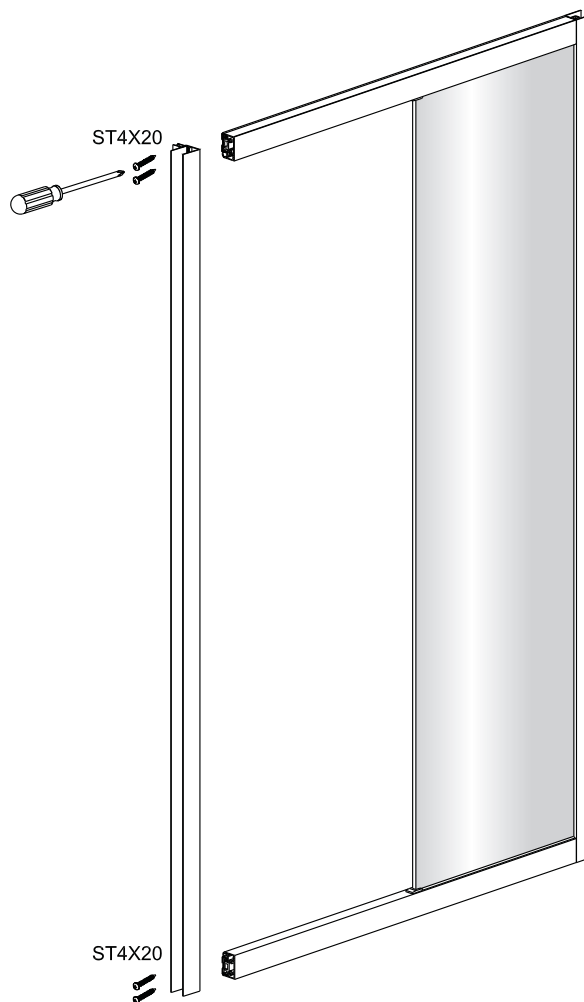
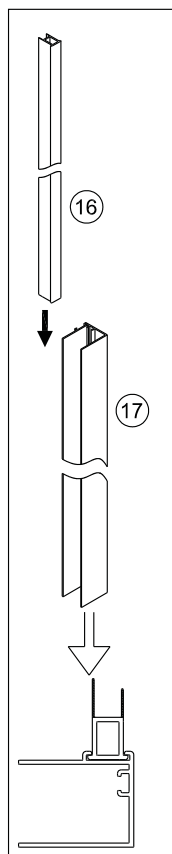







④

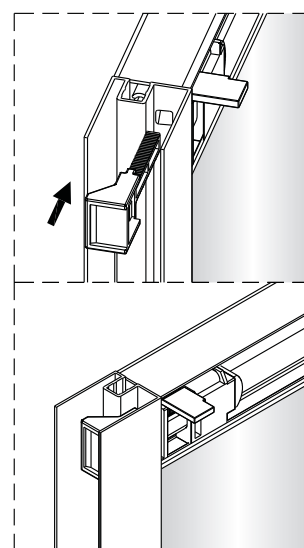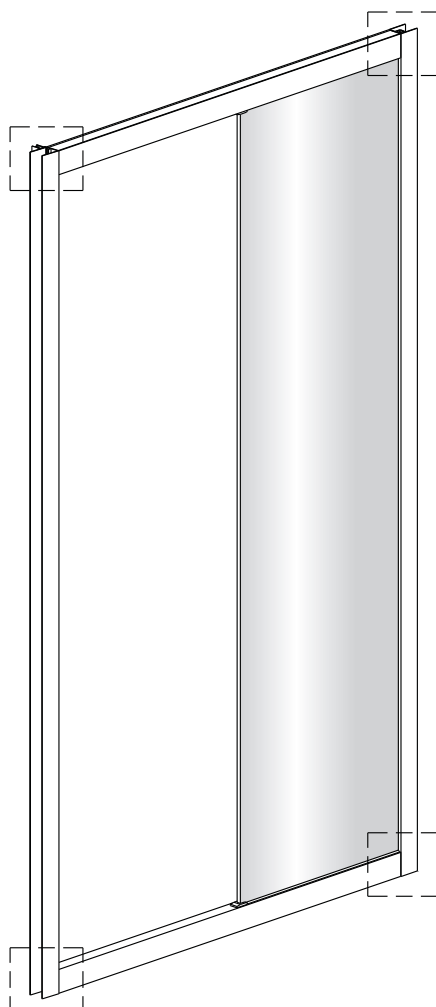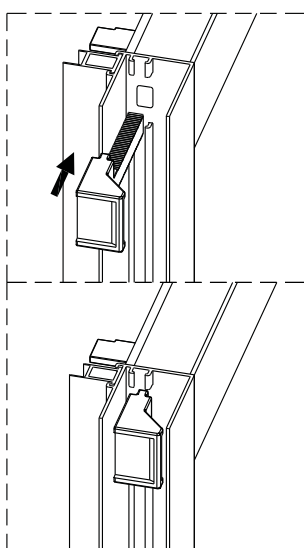


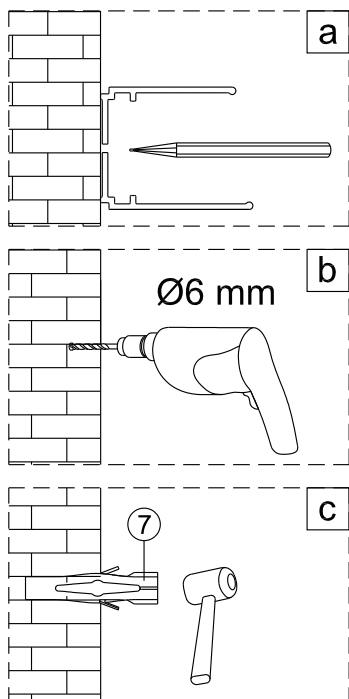


	A(mm)
975	975~1005
1075	1075~1105
1175	1175~1205
1275	1275~1305


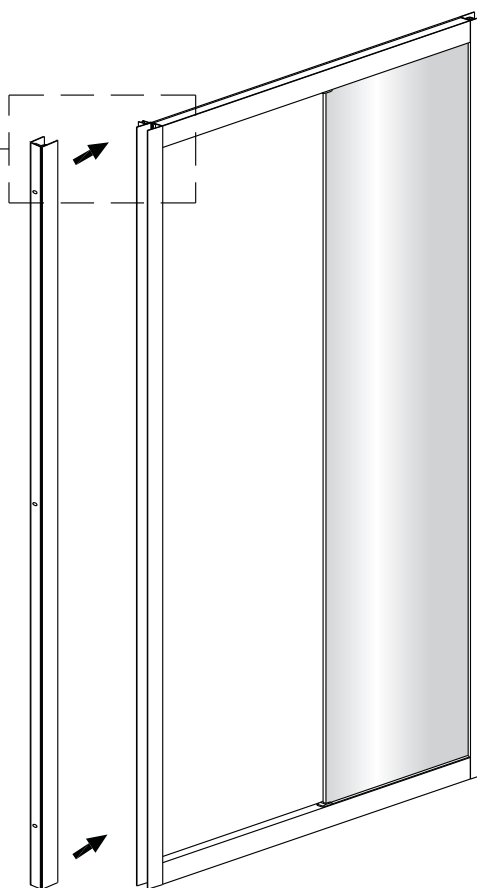
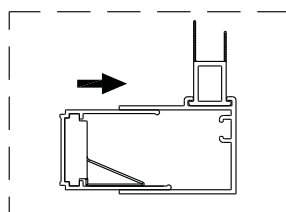
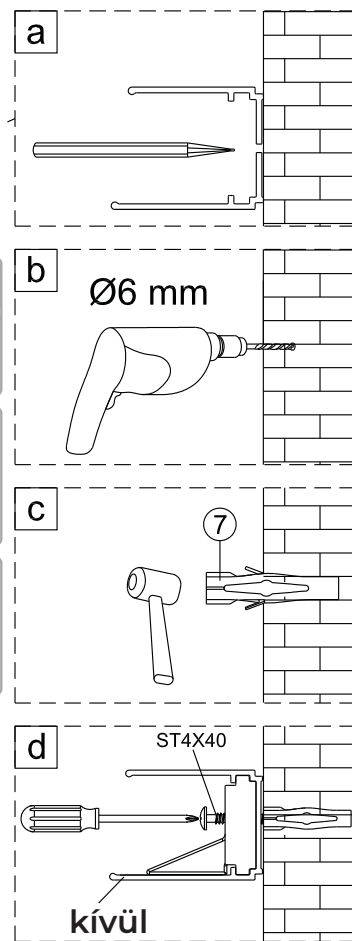
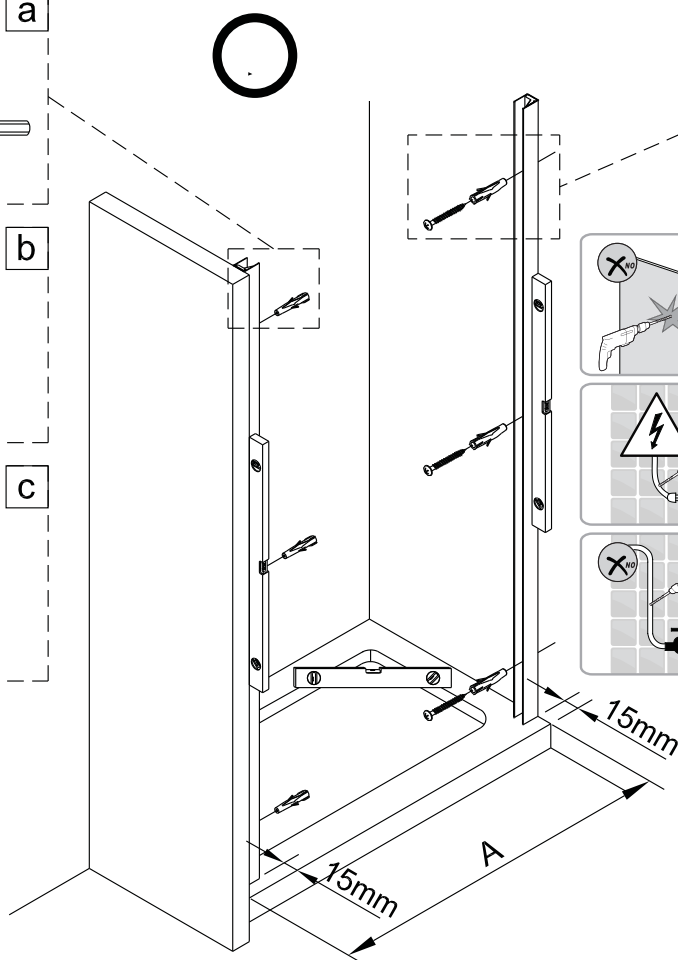


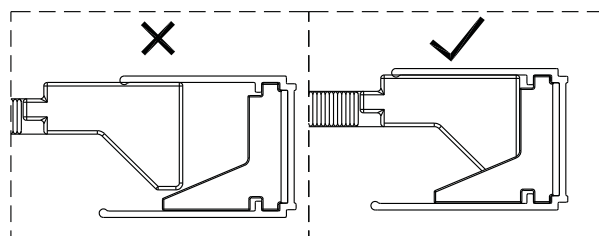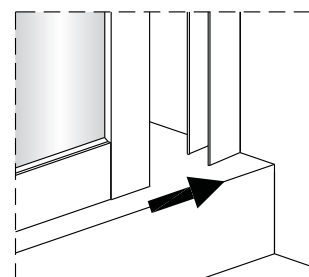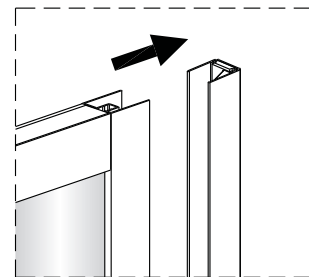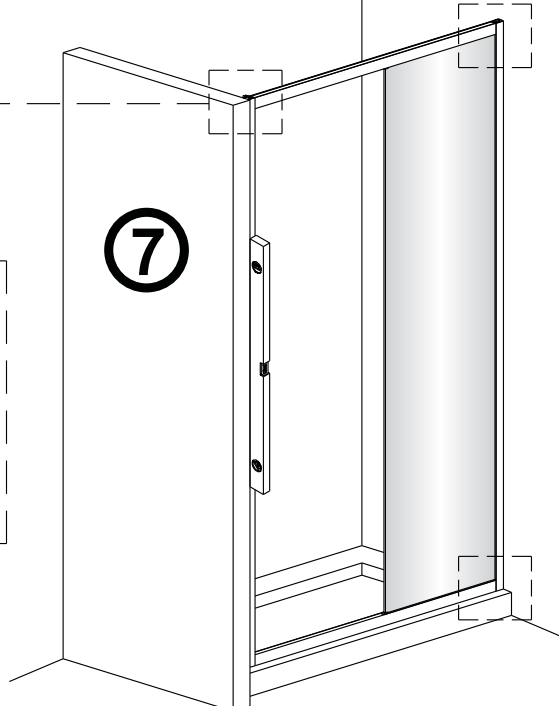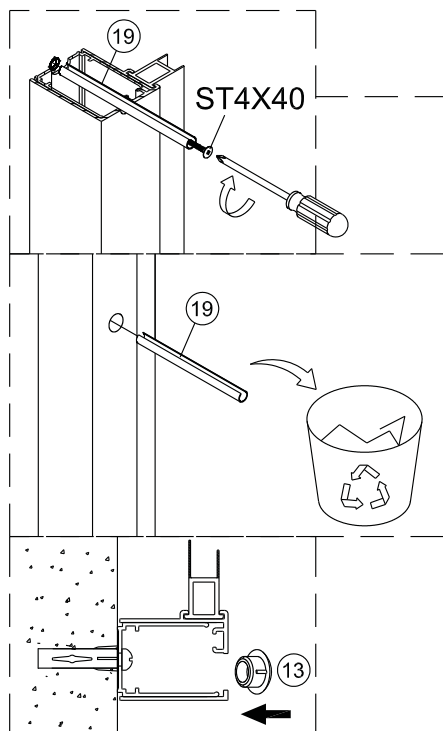





8

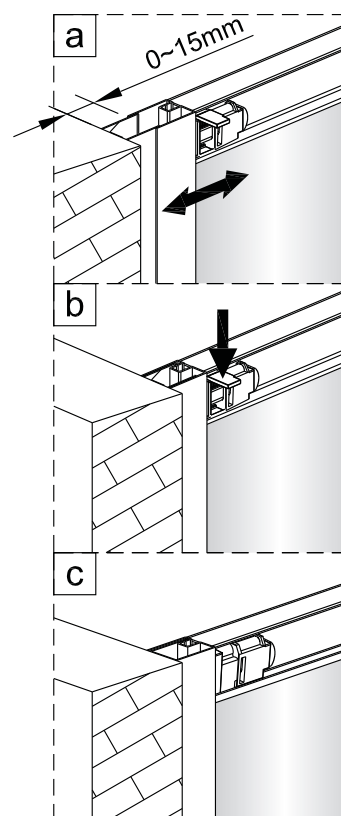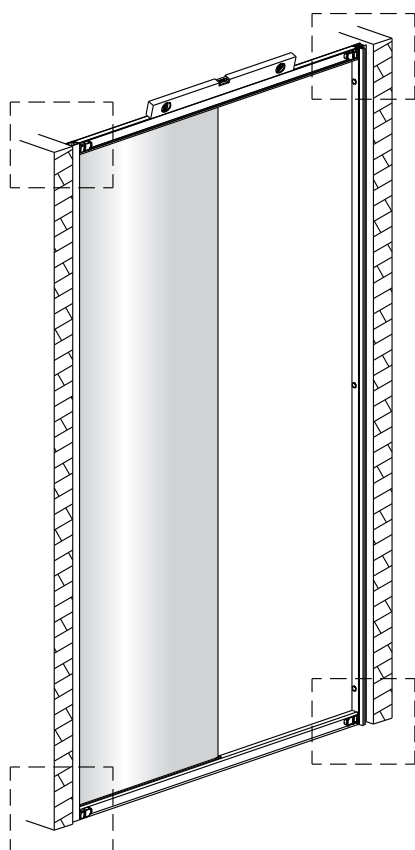


9

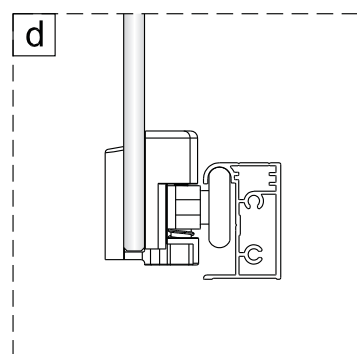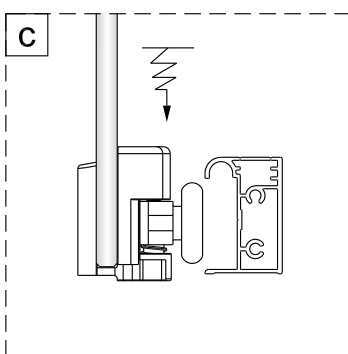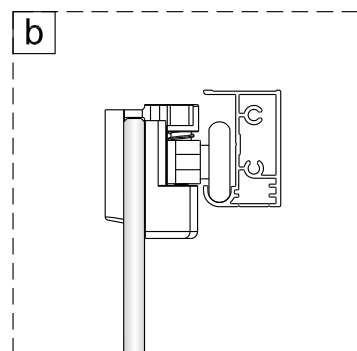
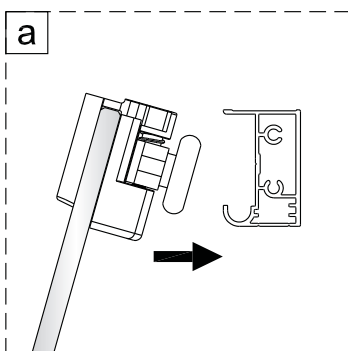
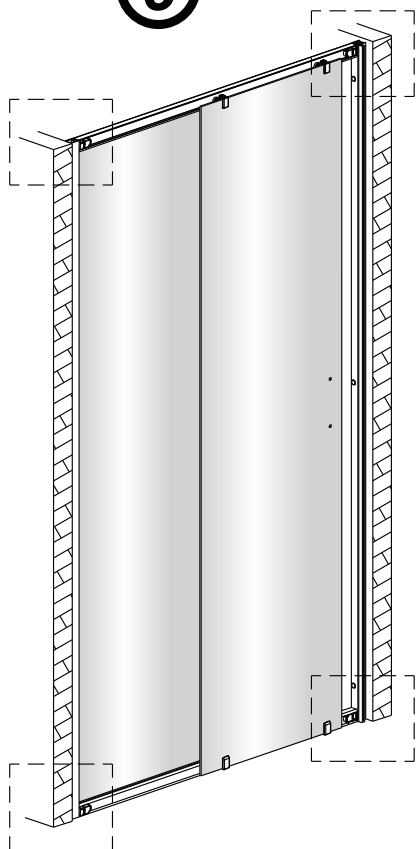


10

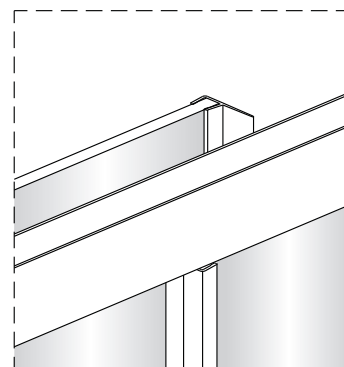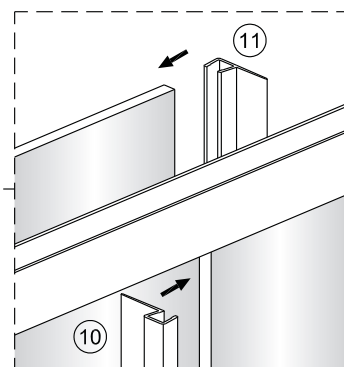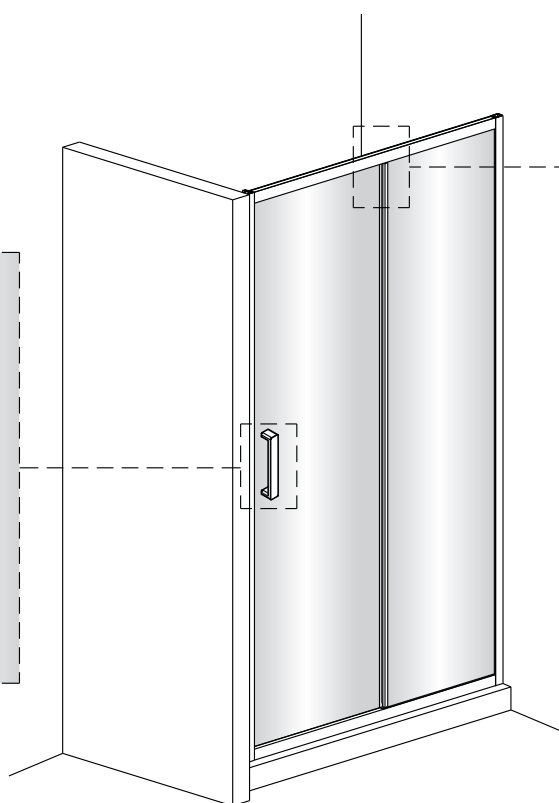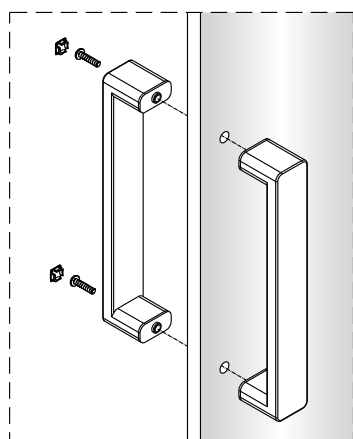

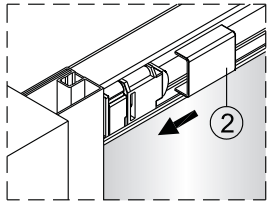

11

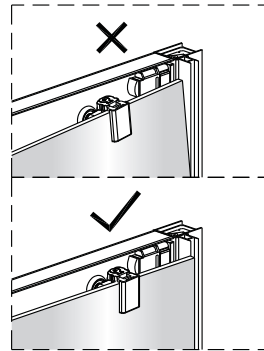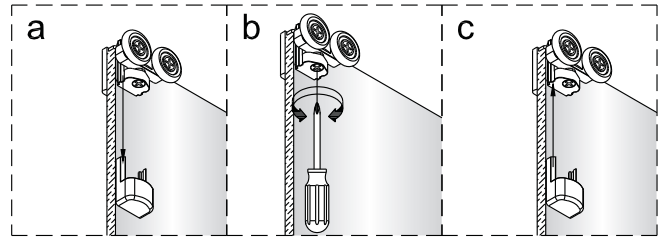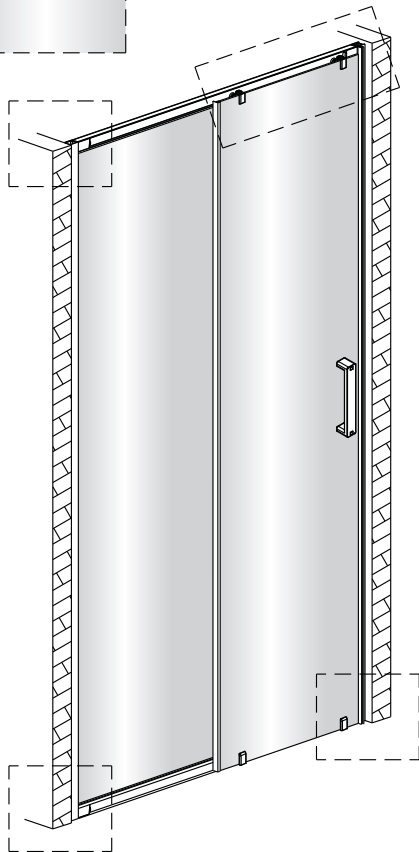

12

